GL300 Tracker

Rebooting the GL300

1. Locate the power button on the top of the unit.

Power Button

 Press and hold the power button until the red LED begins to flash. Release the power button once this starts.



GPS
PWR
CEL

3. The blue and green LEDs will also begin flashing for a few seconds, then all LEDs will go out. Once the LEDs are dark, let the unit rest for fifteen seconds, then press the power button again until the blue LED comes on.

